

OPERATION AND MAINTENANCE MANUAL

- **MYPC40-500** (VER:4.0)
- **MYPC40-1500** (VER:4.0)
- **MYPC32-100** (VER:4.0)

Please scan the following QR code or download
the operation manual from MYTORQ website

<https://www.mytorqtools/tc/download-list.php>



SAING EI CORP.

<https://www.mytorqtools.com>



Y2F125Q-17E-002

NOTICE

Metal Assembly Screwdrivers are designed for installing threaded fasteners in light industrial and appliance manufacturing applications.

MYTORQ is not responsible for customer modification of tools for applications on which MYTORQ was not consulted.

WARNING

Important safety information enclosed.

Read all these instructions before placing tool in service or operation this tool and save these instructions. It is the responsibility of the employer to place the information in this manual into the hands of the operator. Failure to observe the following warnings could result in injury. When using electric tools, Basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, incl

1. General Safety Rules	1
2. Important Safety Instructions	2
3. Operations Cautions	4
4. Main Technical parameters	5
Control panel specifications.....	6
Functions of Keys on Pane l.....	7
I/O Inserting Hole	9
Functional Dip Switch	11
5. System Setting	13
6. Simulated Learning	16
7. Grounding	16
8. Servicing	16
9. Explosive Drawing for Parts /Spare- Part List	18

Important Safety Instructions

WARNING! Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury. The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

SAVE THESE INSTRUCTIONS

1) Electrical Safety

- a) **Keep work area clean and well lit.** Cluttered and dark areas invite accidents.
- b) **Do not operate power tools in explosive atmosphere, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

2) Electrical Safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Don't expose power tools to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord to carry, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.**
Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
Use of cord suitable for outdoor use reduces the risk of electric shock.

3) Personal Safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use power tool while you are tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use safety equipment. Always wear eye protection.** Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Avoid accidental starting. Ensure the switch is in the off position before plugging in.** Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- d) **Remove any adjusting keys or wrench before turning the power tool on.** A wrench or a key that is left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.**
This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of these devices can reduce dust-related hazards.

4) Power tool Use and Care

- a) **Do not force the power tool. Use the correct power tool for your application.**
The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use power tool if switch does not turn it on or off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the power tools.**
Such preventive safety measures reduce the risk of starting the power tool accidentally.

- d) **Store idle power tools out of reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**

Power tools are dangerous in the hands of untrained users.

- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean,** properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tools, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed.**

Use of the power tool for operations different from intended could result in a hazardous situation.

5) SERVICE

- a) **Have your power tool serviced by qualified repair person using only identical replacement parts,**
This will ensure that the safety of the power tool is maintained.

Additional information shall be provided.

- a) Instruction for putting into use.
1. Setting-up or fixing power tool in a stable position as appropriate for power tools which can be mounted on a support.
 2. Assembly
 3. Connection to power supply, cabling, fusing, socket type and earthing requirements.
 4. Illustrated description of functions.
 5. Limitations on ambient conditions.
 6. List of contents.
- b) Operating Instructions.
1. Setting and testing.
 2. Tool changing.
 3. Clamping of work.
 4. Limits on size of work piece.
 5. General instructions for use.
- c) Maintenance and servicing.
1. Regular cleaning, maintenance, and lubrication.
 2. Servicing by manufacturer or agent, list of addresses.
 3. List of user-replaceable parts.
 4. Special tools which may be required.

Operations Cautions

1. Please read the operating manual thoroughly and comply with safety regulation to operate this Multi-Function Controller.
2. Please grasp the plug of power cord while plugging in or out the plugs of connecting cord of Electric Screwdriver and power cord.
3. Please fix the power controller to avoid any danger of pulling and dragging the power cord.
4. Do not near oil, chemical materials or heated objects, also please be alert not to scratch the power cord by sharp object.
5. This type of Controller can only be applied to MYTORQ Electric Screwdriver with Counter. Do not use Electric Screwdriver Controller on other types of machinery.
6. In case of the Controller is overheated or overloaded with maximum current rating of fuse, the high-speed fuse will be melt down and cut off the power. If the Controller continues to jump off or has an abnormal switching reaction, please stop the operation immediately and send back the Controller for repair.
7. When Electric Screwdriver is running, if slides Forward/Reverse Switch instantly, device will generate the protection program to force Electric Screwdriver stop.
8. Please do not disassemble Electric Screwdriver casually and try to repair it by self.
9. When Controller is not in use, please turn the main power switch OFF and unplug the power.
10. The electric frequency will be lower when the voltage is adjusted as Lo or below 32V, so the torque of the electric screwdrivers can't be worked out except below scale of 4.

CAUTION

- * Please arrange to use the whole set of Electric Screwdriver MY2 MY5 MY7 MY8 MYT MYR series except MY2 MY5 MY7 MY8 MYT MYR series with the Multi-Function Controller.
- * Please arrange to use together with MYTORQ MY2 MY5 MY7 MY8 MYT MYR series Electric Screwdriver. If operator uses different brand of Electric Screwdriver and repair tools with parts or accessories not from MYTORQ manufacturer, it may cause the Controller malfunction or poor quality. As a result, all of product guarantees will be void and no obligation to the manufacturer.
- * When Electric Screwdriver is running, if operator slide Forward/Reverse switch instantly, device will turn on the protection program to force the Electric Screwdriver stop running.
- * Don't switch HI/LO changeover button when the screwdriver is running.
- * To plug or unplug the DC connector must wait the LED OFF after power off.


Main Technical parameters

Model No	MYPC32-100 (Ver : 4.0)	MYPC40-500 (Ver : 4.0)	MYPC40-1500 (Ver : 4.0)
Input Voltage	AC 100-240V 50 / 60Hz	AC 100-240V 50 / 60Hz	AC 115/230V 50 / 60Hz
Output Voltage	DC 32V/ 24V	DC 40V/ 32V/ 24V	DC 40V/ 32V/ 24V
Power Consumption	60W	220W	360W
Counting Numbers	1~99		
Counting Method	Forward as / Count down		
Connecting Sensor	ON / OFF		
Sensing Switch Mode	ON (2 Sensor) / OFF (1 Sensor)		
Slow-Start Time Adj.	0.0~9.9 seconds		
Slow-Start Speed Adj.	L0 : 100% , 30%~90% L1~L9 Rated speed		
Start Detecting Time	0.01-9.99 seconds		
Stop Detecting Time	0.1-9.9 seconds		
Detecting Alarm	ON/ OFF/ FF/ EF with LED and buzzer		
Auto response/Manual response	ON / OFF		
External Connection Input	Forward / Reversion / Prohibit operation / Sensor Switch / resuming Switch / Confirm Switch		
External Connection Output	OK/ NG/ OK ALL		
Electric Screwdriver Speed Control	HI / LO ; Slow Start		
Size (mm)	200*130*100	247 *130*100	
Weight (Kg)	1.53	2.4	
Applicable Electric Screwdrivers	MY2-0235L ; MY2-0235LS5 ; MY2-0235LS6 ; MY2-0235LS7 ; MY2-0507L ; MY2-0110L ; MY2-0210P	MY8-0205L ; MY8-0205P ;	MY9-0206L ; MY9-0206LF ; MY9-0309L ; MY9-0612L
	MY5-0212L ; MY5-0212P ; MY5-0212LF ; MY5-0212PF ; MY5-0319L ; MY5-0319P ; MY5-0317LF ; MY5-0317PF	MYT-0320L ; MYT-0830L ; MYT-0205L	MYT-0103LF ; MYT-1235LF ; MYT-0205LF ; MYT-2507L
	MY7-1030L ; MY7-1030P ; MY7-0522LF ; MY7-0522PF		MYT-0206L ; MYT-0309L ; MYT-0412L ; MYT-0618L ; MYR-0206L ; MYR-0309L ; MYR-0412L ; MYR-0412LF ; MYR-0618L ; MYR-0618LF ; MYR-0825L ; MYR-0825LF ; MYR-1235L ; MYR-2050L ; MYR-0206P ; MYR-0309P ; MYR-0412P ; MYR-0412PF ; MYR-0618P ; MYR-0618PF ; MYR-0825P ; MYR-0825PF ; MYR-1235P ; MYR-2050P
Accessories	Power cord *1 、 Key *2		

※MY2-0235LS5 can't work with slow start (RC / SP) function.

※MY2 MY5 MY7 MY8 MYT MYR series must be used with SIX PIN screwdrivers, so please confirm the screwdriver's type is MY2 MY5 MY7 MY8 MYT MYR series and the connector is SIX PIN when using.

Step of the screwdriver confirmation :



1. Confirm the sticker is " MY " type.

2. Confirm the screwdriver's CONNECTOR type is SIX PIN.







3. Confirm the connect cable between screwdriver and power controller is SIX wires.










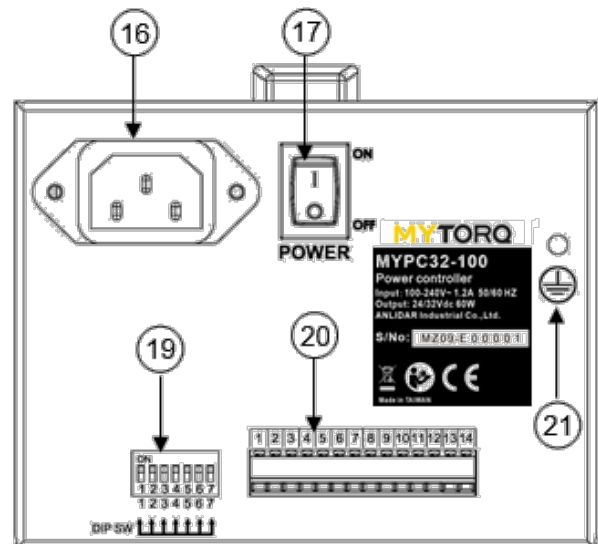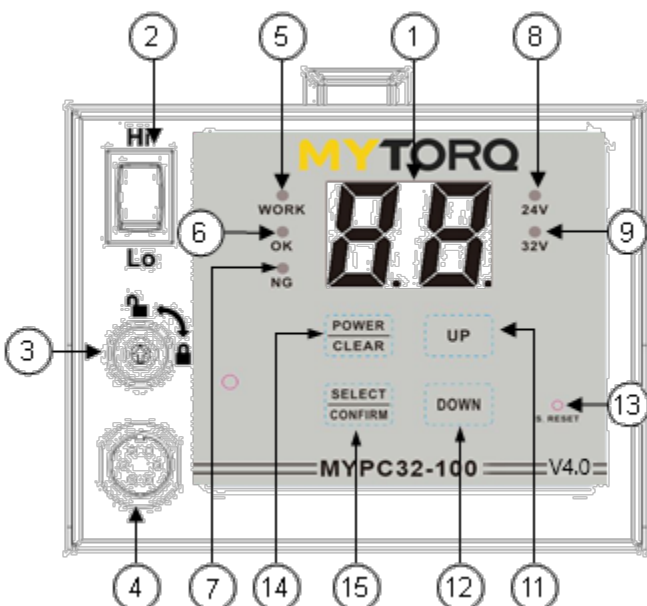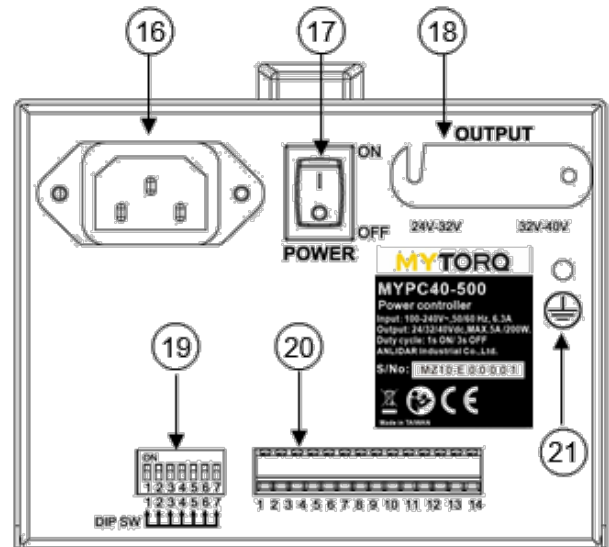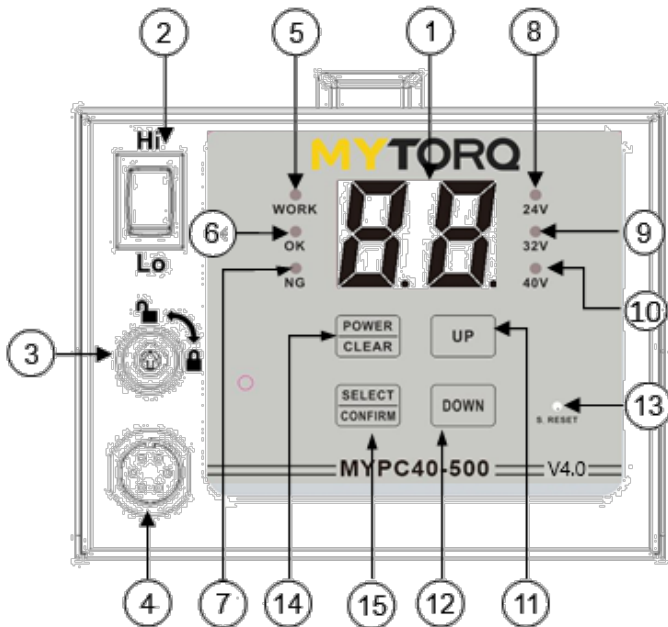








































Control panel specifications

NO.	PARTS NAME	NO.	PARTS NAME
1	LED Indicator	12	Down-Selecting Key
2	HI / LO Speed Switch	13	System Build-in Reset Key
3	Key setting lock	14	POWER/CLEAR Key
4	6Pin Connector	15	Functional Selection / Confirm Key
5	WORK Light	16	Power point
6	OK Light	17	POWER SWITCH
7	N.G Light	18	Output voltage choice
8	24V Light	19	I/O Inserting Hole * Instruction
9	32V Light	20	Functional Dip Switch * Instruction
10	40V Light	21	GND
11	Up-Selecting Key		




Functions of Keys on Panel :

Key	Description of function.	Remarks										
	<p>POWER : Power Switch</p> <p>(1) Press and hold for 6 seconds that will turn off counter and other functions including 7 segment LED display.</p> <p>(2) Press and hold for 3 seconds to turn counter back on when counting function is deactivated.</p> <p>CLEAR : Clear Switch</p> <p>When operator intends to reset counter during operation, simply press and hold for one second till beep once. But under a cycle mode, to return back U1 for resetting by pressing and holding keypad for 3 seconds till beep twice.</p> <p>Switch page : Under setting menu will change pages of decimal point</p>	When there is NG signal, press CLEAR bottom to clear the NG signal										
	<p>SELECT :</p> <p>Press and hold SELECT button for 3 seconds to enter system setting menu :</p> <p><u>SL</u>---- <u>SC</u>----<u>At</u>----<u>Ot</u>----<u>Rc</u>----<u>SP</u>----<u>Ht</u>----<u>Lt</u>----<u>LL</u>----<u>NS</u>----<u>Ut</u>----<u>rt</u>----<u>rr</u>----<u>rS</u></p> <p>When enter the setting menu. Press and hold S button to show the function (ex : SL or SC...etc.) and with beep sound. Release the "S" button to show the setting value.</p> <p>CONFIRM :</p> <p>When DIP SW3 ON, when the user finished fastening a unit of screws. The counter requires to press CONFIRM button to start the next unit.</p>	<p>1. Refer to CONFIRM mode :</p> <p>When there is NG signal output. Press "CONFIRM" button to stop the NG signal output.</p>										
	<p>UP :</p> <p>In system menu, pressing the key to increase the number.</p> <p>This key will point out user set-up number and unit during the process :</p> <p>U1 : No.1 setting number. U2 : No.2 setting number. U3 : No.3 setting number. U4 : No.4 setting number. U5 : No.5 setting number.</p>	When press the UP button (hold), then panel will show the unit number, then press the start plate and the screwdriver will not operate										
	<p>DOWN :</p> <p>In system menu, pressing the key to decrease the number.</p> <p>This key will point out user set-up number and group during the process :</p> <p>U1 : No.1 setting number. U2 : No.2 setting number. U3 : No.3 setting number. U4 : No.4 setting number. U5 : No.5 setting number.</p>	When press the DOWN button (hold), then panel will show the unit number, then press the start plate and the screwdriver will not operate										
	<p>Up+Down :</p> <p>Select the following modes.</p> <table border="1" data-bbox="240 1469 1169 1664"> <tr> <td></td> <td>When fastening screw, completing work and if mistaken operation, the buzzer sound will be on.</td> <td></td> <td>warring beep when finish all screws in the list and error in operation</td> </tr> <tr> <td></td> <td>Only beep warning when wrong operation</td> <td></td> <td>As one screw is fastened and work is completed, buzzer will be on ; wrong operation will be no sound.</td> </tr> </table>		When fastening screw, completing work and if mistaken operation, the buzzer sound will be on.		warring beep when finish all screws in the list and error in operation		Only beep warning when wrong operation		As one screw is fastened and work is completed, buzzer will be on ; wrong operation will be no sound.			
	When fastening screw, completing work and if mistaken operation, the buzzer sound will be on.		warring beep when finish all screws in the list and error in operation									
	Only beep warning when wrong operation		As one screw is fastened and work is completed, buzzer will be on ; wrong operation will be no sound.									
	<p>S.RESET : SYSTEM RESET</p> <p>Because of voltage or operation cause system abnormal, push this key back to the initial number.</p> <p>The S.RESET is not functional if the outer key is under LC mode.</p>	Press RESET key once then release. When hold RESET key, the screwdriver is not able to operate until the release the reset button.										
	<table border="1" data-bbox="240 1883 1185 2067"> <tr> <td></td> <td></td> <td></td> <td></td> <td>Lock function of the Panel Lock</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td>Unlock function of the Panel Lock</td> </tr> </table>					Lock function of the Panel Lock					Unlock function of the Panel Lock	
				Lock function of the Panel Lock								
				Unlock function of the Panel Lock								

<p style="text-align: center;">UP</p> <p style="text-align: center;">+</p> <p style="text-align: center;">POWER CLEAR</p>	<p>Enter the setup : dt----- tt-----Sr----SA----Gr-----Rn</p> <p>dt/tt</p> <p>dt : the time range between each screwing process. This function will be triggered after finish one screwing process. If user doesn't start next screwing process in this setting time range. The system will display "dt" until next screwing process is started. ("01"= 1 second)</p> <p>tt : All the screwing processes in this list need to be finished under this setting time range. If user didn't finish all the screws in this setting time range, the panel will display "tt" until all the screwing processes are finished. ("01"= 1 minute)</p> <p>Note :</p> <p>(1) When dt errors, restart the screwdriver will release from error status. If two or more errors occurs, the red light up and buzzer sounds, LED screen will display other error messages. (eg : NS) : To solve other errors first and the red light will turn off, but dt continued errors.</p> <p>(2) When tt error occurs, to complete all fastening process will be released from tt error condition. If an error occurs while there are other error coexist, same as dt situation.</p> <p>(3) When multiple loop mode : dt is for every one small loop (U #, # : 1,2,3,4,5), for each fastening screw time interval. tt is for the time of one big loop (U1 ~ U #, # : 2,3,4,5), which is from U1 first start until the end of last U # screw is fastened.</p> <p>(4) When the dt / tt occurs, press CLEAR to release from dt / tt , counter will return to the original screw numbers setting of the current unit</p> <p>Sr : Multiple function switch cycle SENSOR Y : multiple cycles (SW2 = ON, SW6 = ON), when the number of fasten screws U1 are complete then screwdriver stop until the sensor triggered (SW4 = OFF). If SW4 = ON, you need to trigger twice before jumping to U2 ... and so on N : multiple cycles (SW2 = ON, SW6 = ON or SW2 = ON, SW4 = ON, SW6 = ON), when the number of fasten screw U1 are finish will automatically execute At time of that unit, then automatically start unit 2. Sr default : N</p> <p>Gr: When Er occurs, selects Y without "CONFIRM" to disable. If selects N be sure to press "CONFIRM" to disable. For example, when C4 & C5 trigger to Er signal, if Gr = Y happens the "CONFIRM" should be ignored which means an Er occurs that is the normal trigger at this situation. ※ When Gate_SW2_OFF_Err occurs, user must have a "CONFIRM" to disable. When C1, C2, C4 & C5 are under stage of Er, SW = OFF shuts off which means there is only "CONFIRM" can help to disable.</p> <p>Rn: Selects Y: this will enable the function of reversing to resume. See SW7 status below: SW7 ON = for reversing to resume to preset of screw's quantities SW7 OFF = for reversing to resume only once Selects N: disable the function of reversing to resume and SW7 (ON/ OFF) is futility.</p> <p>Note : When SW6 = ON, Sr parameter setting (Y / N) only for reference. That is, Sr is a global variable, once SW6 = ON : Sr can set Y or N, then U2 ~ U5 SENSOR mode will follow same setting</p> <p>SA : When under Sensor mode, SA parameter setting only effect when the SW2 = ON, SW4 = OFF. The up and down button in the front panel can switch value (HI / LO). HI : Hi Active LO : Lo Active The default value is : HI</p>	<p>Note :</p> <p>(1) When the user presses the POWER + UP, panel displays dt, release POWER + UP to show up values. At the dt mode, pressing "S" key can set "tt" value. Repeating press "S" key for the following setting. "Sr" → "SA" → "Gr" → "Rn"</p> <p>(2) dt and tt cannot be coexisted. When value sets as dt > 0, tt will disappear. The same, when the tt > 0, the dt will disappear.</p>
	 <p>S. RESET Unlock Function</p>	
	<div style="border: 1px solid black; padding: 5px; display: inline-block;">   <p>S. RESET Lock Function</p> </div> <p>1.Lock with the key (Need use the key to lock) 2.When KEY lock is in lock position, the user changes the Hi/Lo speed setting, the LED will display "PC" and the counter will beep 8 times until user change back the Hi/Lo setting.</p>	

I/O Inserting Hole :

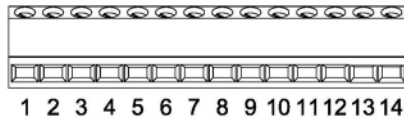

No	Name	In/Out	Content	wave pattern of signals	Remark
CN1	V+		Output 12 or 24 v dc		Output : DC +12V or +24V (Max : 200mA) Default value : +24VDC (+12VDC need to custom modify)
CN2~CN3	OK	Output	CN2 and CN3 will be short when finished fastening one screw		Automatically open MOS RELAY (default) +/- 40V, +/- 250mA (Open Collector need to custom modify)
CN4~CN5	NG	Output	CN4 and CN5 will be short when error occur		Automatically open MOS RELAY (default) +/- 40V, +/- 250mA (Open Collector need to custom modify)
CN6~CN7	OK ALL	Output	CN6 and CN7 will be short when finished fastening all screw in the list		Automatically open MOS RELAY (default) +/- 40V, +/- 250mA (Open Collector need to custom modify)
CN8	START_IN	Input	External START input		1. When short Start input and COM(CN14) (CLOSE circle), able to start the screwdriver 2. When open circle with COM(CN14), screwdriver stop.
CN9	DIR_IN	Input	External REVERSE input		Shorten with COM (Close circle) and when enable start signal (CN8 + COM), screwdriver will start with Reverse rotation. If the driver switches F/R switch on "forward", when CN9 + COM short screwdriver is still reversed rotation after start
CN10	DISABLE	Input	External DISABLE input		When short with COM (CLOSE circle), cannot start the screwdriver. When open circle with COM, screwdriver is able to start. * When DISABLE (shorted with COM), work LED lights ON for 5 seconds, then OFF, then light up again for 5 seconds, on and off in circle.
CN11	CONFIRM	Input	External CONFIRM input		This switch feature and function is the same as CONFIRM, but no SELECT key function. After press CONFIRM the NG signal will be release.
CN12	GATE	Input	External sensor switch		Input a confirm signal for machine to start working. Sensor Switch : External device, you can connect one or two switches.
CN13	CLR	Input	External device CLEAR switch		External clear switch, same as clear button on the panel. It also can disable N.G signal when it is triggered
CN14	COM		—		CN8 ~ CN13output/input signal COM port


※CN1(V+) and CN14(COM) can provide DC 24V(Default) ◦ (DC +12V need to custom modify)

※ If users need different DC voltage, they must use their own step-down circuit to decrease voltage.


※ If user need to input voltage to drive the alert instrument, do not use over DC +/-40V /, +/- 250mA voltage.

Terminal Connecting Diagram : (To take factory default : **MOS RELAY I/O** for example)

Output :

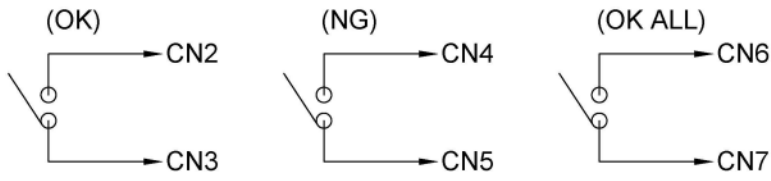


Input :

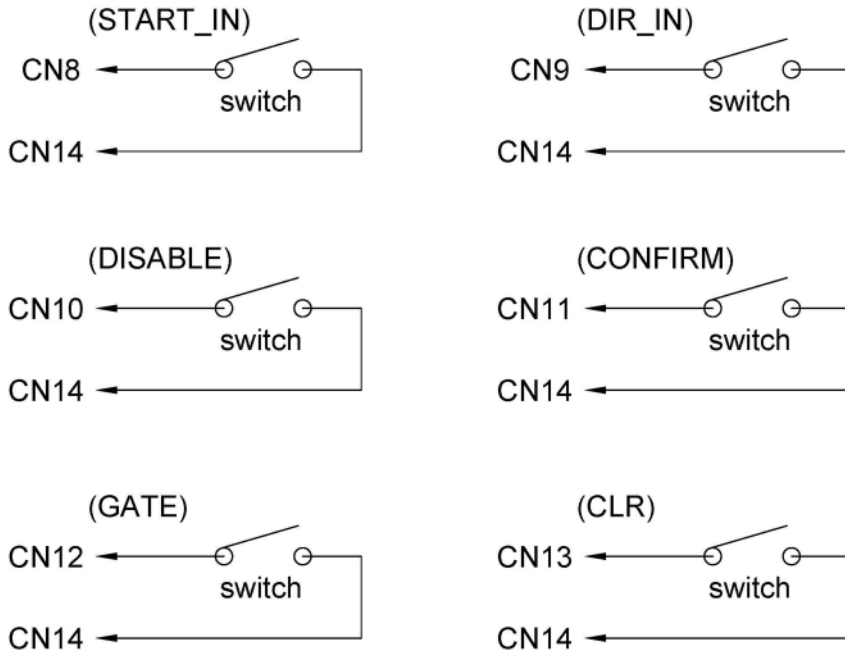

Functional Dip Switch :

SW	Name	OFF	ON
1	Counting Mode	Count Backward	Count Forward
2	Sensor Switch	Stop	Work
3	Manual Confirm Mold	Auto Zero	Start the Manual Confirmation
4	Switching Mode	Once Confirm	Twice Confirm
5	Automatic simulation learning mode	Stop	Work
6	Units' arrangement Mode	Stop	Work
7	Reverse resuming	only one screw count backward	Enable to count backward within the screw's quantity setting

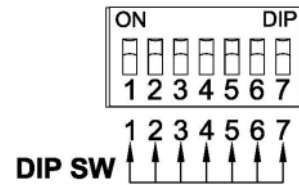

Instruction :

SW1 : Selects ON, counts screws number forward as 1----2----3----4----5-----1...
 Selects Off, count down the screws number as 5----4----3----2----1-----5...

SW2 : Sensing Switch, select ON means Counter needs external sensing switch, MYPC40-500 must be in accordance with the sensing switch mode to determine if electric screwdriver will work. Select OFF means unnecessary for external switch, count number don't have to consider external switch to determine if it works.

Note : SA settings will affect SW2 = ON, SW4 = OFF the SENSOR drive mode, please refer to the SA setting for detail information.

SW3 : The Count number Reset Mode, when counting screws number reach to the setting value, counter must be reset to default value, if select ON which stands for manual reset, user must press "SELECT/CONFIRM" / external CONFIRM (CN11+CN14) Key on the panel back the setting count number, otherwise Electric Screwdriver is unable to start under no confirming situation on the device. Select OFF makes system automatically to recover from the setting count number.

SW4 : Switching Mode : Select ON means the external SENSOR need to have two signals been sent to MYPC40-500 which stands for the fastener on operational process need to go through the sensor on machine table to identify the fastener has been removed from working table, and new fastener goes through another SENSOR for confirming the new fastener that has reached the working table. Therefore two confirming signals allow S MYPC40-500 to start the Electric Screwdriver running. Select OFF means only need one SENSOR to confirm the fastener that has been removed from this working table ; this allows Electric Screwdriver starts to work.

SW5 : Auto-Learning Mode: The Counter counts screws number and sends OK & NG signals followed by Ht/ Lt settings. Thus, Auto-Learning Mode experiences and memorizes screw fastening time from beginning to the end. To do so, simply user switches this mode to ON, and then system will ask fastening position (SL), number of screws (SC) to be tightened, whether needs time to be changed back to default or not (At), and OK LED keeps displaying time (Ot). Besides, user can add slow start function (Rc) or select speed level (SP), if need.

SW6 : Arrangement form : The memory can save five units number, user can push switch ON, the system will automatically arrange five units, easy for user to make arrangement at work.

SW7 : Reverse Resuming : User can turn on the reverse resuming switch to lose screws back. The system is able to count backward for presetting quantity of screws to be fastened. If the reverse resuming switch is switched to off, the system is only to do countdown for the last screw.

Note : Multiple cycles (SW6 : ON) :

(1) $rr = 0$

Whether $Sr = Y$ or $Sr = N$, the reverse will both added to the U1.







(2) $rr > 0$:

The screw list set with rr ; the screwdriver well not reverses and will not add screws on the screw count.






At this point the user press CLEAR button or use CN13 to clear the count value to solve the problem and restart the operation after the "new work."


If customers want to reverse all screws, please turn off the counter before start reverse.

CONFIRM :

Code	Instruction	Notations
	First external sensor to be confirmed. SW2 (ON) + SW3 (OFF) + SW4 (OFF)	External sensor * When the SA is set to HI, the display "C1"; if set is LO and will displayed "C.1 "
	The second external sensor to be confirmed. SW2 (ON) + SW3 (OFF) + SW4 (ON) ※When error occurs, the sensor needs to be triggered again. At this moment, panel shows "Er", user must press the "CONFIRM" from panel or short circuit (CN11 + CN14 ports) to clear "Er".	External sensors
	Manual confirm the panel. SW3 (ON)+SW2(OFF)+SW4(OFF)	Panel / External CONFIRM
	A switch SENSOR confirm +confirm button on the panel or short circuit CN11+CN14 SW2(ON)+SW3(ON)+SW4(OFF)	External sensor + Panel / External CONFIRM * When the SA is set to HI, the display "C4"; if set is LO and will displayed "C.4 "
	Two switch SENSORS confirm + confirm button on the panel or short circuit CN11+CN14 SW2(ON)+SW3(ON)+SW4(ON)	External sensors + Panel / External CONFIRM
	Reset to the default setting.	CLEAR


Error Code on LED description :

Symbol	Definition	Description
	High Temp. Protect	1.Screwdriver will stop when the operation temperature is higher. 2.LED will display [E4] to indicate high temperature protect.
	Stall Protect	1.Screwdriver will stop when motor is abnormal stalled after start. 2.LED will display [E5] to indicate stall protect.
	Push plate Error	1.Screwdriver will stop when push plate change between motor running. 2.LED will display [E7] to indicate abnormal operation.
	Brake Error	1.Screwdriver will stop when the abnormal brake signal appeared before start. 2.LED will display [E8] to indicate abnormal brake error.
	Power Error	1.When key is turning to lock, the voltage value has been changed in the meantime, the panel shows up PC status. (8 beeps) 2.A PC shows up when the controller outputs an invalid voltage to electric screwdriver. (e.g. When 24V is the output setting, we still connect a DC 40V screwdriver that does not match to each other. There will come 3 beeps warning (It is the same sign as low voltage) and NG light on. 3.When screwdriver connects to controller, there will need 2 seconds detecting time. (A PC shows up during these 2 seconds)

※ The error when the screw fastened was occurred during the external mode confirmation, the system will detect the abnormal state. The LED will show error code  and the buzzer will ring. The operator must confirm the external sensor (CN11+CN14) or press CONFIRM.



※ If using three units of data only and let three units in cycles. It can set up "00" in counting number on U4, when SW6 switch ON, the system will automatically move in circle from U1~U3.

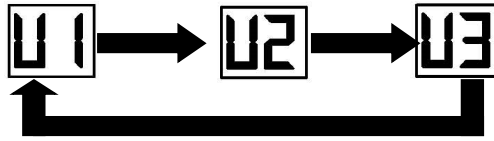






















System setting








System procedure :

SL<SELECT>SC<SELECT>At<SELECT>Ot<SELECT>Rc<SELECT>SP<SELECT>Ht<SELECT>

Lt<SELECT>Ll<SELECT>Ns<SELECT>U<SELECT>rt<SELECT>rr<SELECT>rs<SELECT>SAVE

PROCESS TO SET UP SYSTEM :

1. Please connect the cord, turn on the power switch until LED shows number.
2. Please press SELECT key over three seconds till buzzer making sound, the panel will show  ,  to push UP/DOWN to decrease or increase the number, it can set up five units of number.
3. To press SELECT key, buzzer will sound, the panel will show  ,  to push UP/DOWN to decrease or increase number, the maximum can set up 99.
SC : To set up counting number.
4. To press SELECT, the screen will show  ,  push UP/DOWN to increase or decrease number, the maximum can set up 9.9.
At : Automatic set up CLEAR time.
5. Presses SELECT to select  and  then press UP/DOWN to change digits. The maximum digit is 9.9.
Ot: LED time of OK or OK ALL status.
6. To press SELECT, the screen will show  ,  push UP/DOWN to increase or decrease number, the maximum can set up 9.9.
Rc : To set up slow-start time.
7. To press SELECT, the screen will show  ,  , push UP/DOWN to increase or decrease number between L0~L9, the maximum can set up L9.
SP : To set up speed of slow start.
8. To press SELECT, the screen will show  ,  push UP/DOWN to increase or decrease number, the maximum can set up 9.9.
Ht : Stop time.
9. To press SELECT, the screen will show  ,  push POWER key, adjust decimals  , push UP/DOWN to increase or decrease number, the maximum can set up 9.99.
Lt : Set up Detect Start Time."02."means 0.02.
10. To press SELECT, the screen will show  ,  push POWER key, adjust decimals  , push UP/DOWN to increase or decrease number, the maximum can set up 9.90.
Ll : No times confirmed within set-up time after fastening. "02." means 0.02.
11. Press SELECT for show  on LED and press UP/DOWN for change the setting.
NS : choosing action or not for next screwing process when error occur during screwing.
N : unlock(default setting) Y : lock (need to press S for release)


12. Presses SELECT to select **Ut** and  then press UP/DOWN to change digits. The maximum digit is 9.9.
 Ut: Pre tightening time; any escaped time less than Ut will be counted as NG failure.
13. To press SELECT, the screen will show **rt**, , push POWER key, adjust decimals  push UP/DOWN to increase or decrease number, the maximum can set up 9.99.
 rt : Set up auto reverse time °
14. To press SELECT, the screen will show **rr**, , push POWER key, adjust decimals  push UP/DOWN to increase or decrease number, the maximum can set up 9.99.
 rr : Set up auto forward time.
15. To press SELECT, the screen will show **rS**, , push POWER key, adjust decimal  push UP/DOWN to increase or decrease number, the maximum can set up 9.99.
 rS : Set up automatically forward pause time.

Function Name	Set up Time and Value	Description	Buzz Time/ Light	Manufacturer Set-Up Value
SL	01~05	Screw List	---	---
SC	01~99	Counting number / count-down only	---	05
At	0.0~9.9	Automatic zero time / Signal output time	---	1.0
Ot	0.0~9.9	LED time of OK or OK ALL status.	---	0.0
RC	0.1~9.9	Slow start time	---	0.0
SP	L0~L9	Speed of start : L0 : 100%, L1~L9 (30%-90%) Rated speed	---	L0
Ht	0.0~9.9	Ht time Stop time (Show wrong as screwdriver can't stop at set time after starting, can be used to test stripped screws	3 beeps come with red LED on permanently	2.0
Lt	0.0~Ht	Lt time will show wrong as screwdriver stops before Lt after starting, can test screw is not properly fastened at its position. .	3 beeps come with red LED on permanently	0.00
LL	0.00~9.99	Reconfirm time after fastening.	---	0.00
NS	Y / N	Choosing action or not for next screwing process when error occur during screwing.	LED show NS	N
Ut	0.0~9.9	Pre tightening time; any escaped time less than Ut will be counted as NG failure	---	0.0
rt	0.00~9.99	Auto reverse time/ When the torque is reached, and the screwdriver will start to reverse (backward) in this setting rt time range. (NOTE: rt value must exceed 0.05)	---	0.00
rr	0.00~9.99	Auto forward. when F/R switch is reverse (backward), set the number of seconds first for reverse immediately brakes and pause time rS. then forward until the torque is reached.	---	0
rS	0.10~9.99	Automatically forward pause time. When rr are setting (> 0), will show rS.	---	0.10
Backward to Count-Up	1 COUNT	When screwdriver is backward, the number will be back one	---	---
Ln	---	Automatic learning.	LED keeps flash of light	---


Remark:

- (1) When RC = 0 or SP = L0, there will be no slow start function.
- (2) When RC & SP/ LL are excluded in setting, there is only one setting allowance.
- (3) When rt/ rr & rs/ LL/ Ut are excluded in setting, there is only one setting allowance.

Data Chart :

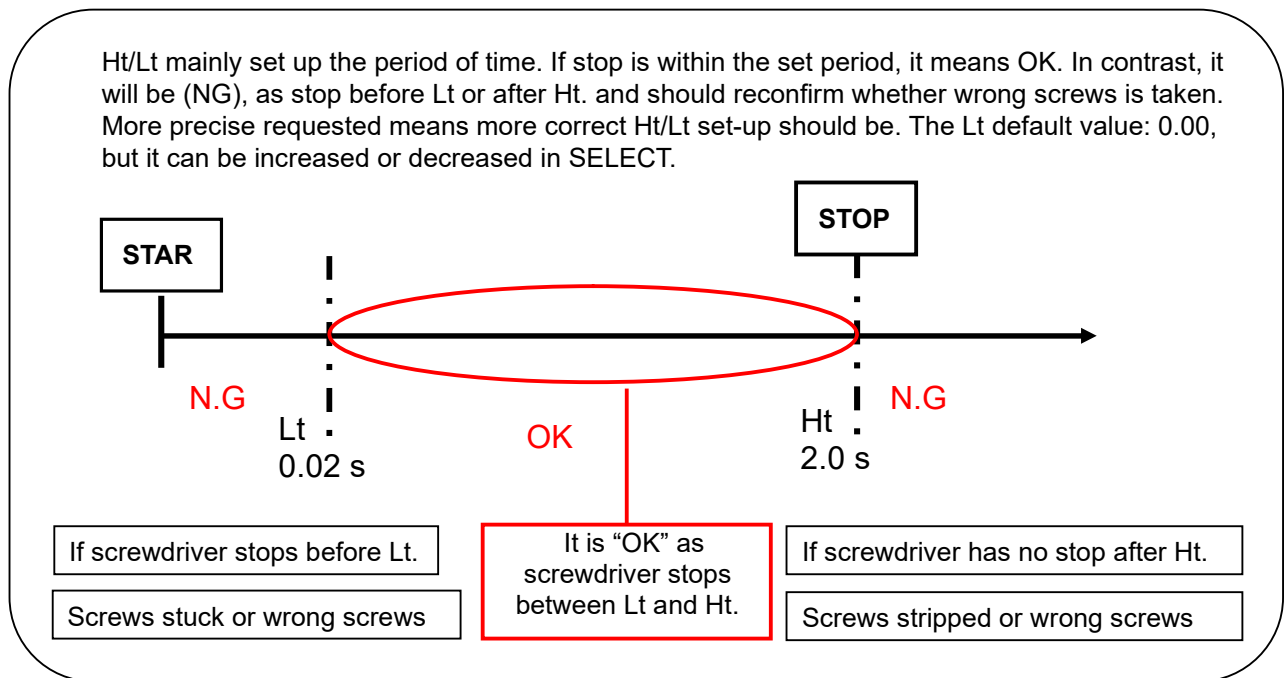


Execute under general pre-set program :

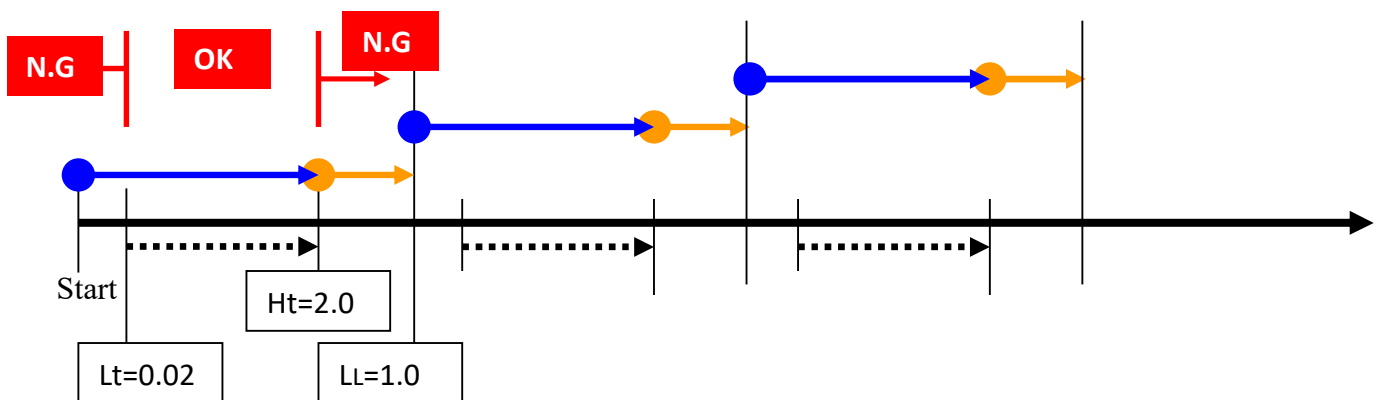

- * If the screwdriver stop time is in dotted line. it is normal fastening. "OK" will be shown.
- * If the screwdriver stop time is before Lt or over Ht stop is before Ht or over Lt, it is "N.G."
- * User can freely adjust Ht. However, if Ht and Lt is closer, it will request more precise.
- * If the user press the push button of the screwdriver after Ht and Lt setting, it is "N.G"

Simulated Learning

1、The switch mode SW5 change into ON.

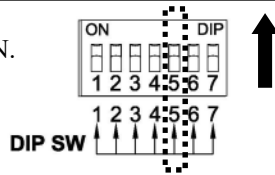

※When SW5 change to ON, it will force to enter simulated learning procedure, any function will not work.

2、When it changes to ON, LED will flash. The user can set whether or not counting screws, starting slow start. The simulated learning function will be turned on after this necessary condition confirming.



3、When set up finish, LED will show 0.0 and the user can test to fasten screws, when screwdriver starts, LED will show the count. When screwdriver shut-off, that means time to fasten screws. User can proceed many tests until satisfaction. User can change SW5 switch to OFF, the system will set up Ht time automatically. (Note : Lt will be set to zero)

4、If user does not satisfy number, user can change SW5 to OFF, push SELECT over three seconds, then enter menu to change.

System procedure :

SL<SELECT>SC<SELECT>AL<SELECT>OL<SELECT>Rc<SELECT>SP<SELECT>Ht<SELECT>
Lt<SELECT>LL<SELECT>Ns<SELECT>Ut<SELECT>rt<SELECT>rr<SELECT>rS<SELECT>SAVE

Grounding

When use Electric Screwdriver Controller, it should be grounded to avoid operator getting electrical shock. This controller is equipped with 3 leading wires and 3 pins of grounding plug to fit for grounding type of outlet. The grounding wire must be connected firmly with power supply equipment for effective grounding result. The leading wire with yellow-green color is a grounding wire. Never attempt to connect this yellow-green color wire on electrified connector, this Controller has built-in grounding wire with electric leakage safety grounding and additionally, the Controller can eliminate ESD static, which is produced by running the electric screwdriver, via grounding wire.

Servicing

Maintenance and Inspection :

1. The controller must be operated in top condition, one day working hour must be not more than eight hours.
2. Please note don't let the controller get over heated, every minute use 10~15 screws to operate.
3. The frequency use of this electric screw driver is over eight hours a day, still it needs periodically testing and treatment. Every 5-6 months.

CAUTION


1. The use of other than genuine MYTORQ replacement parts may Result in decreased tool performance and increased maintenance, and may invalidate all warranties.
2. All repairs and maintenance of this tool and its word must be performed by an authorized service center.
3. MYTORQ is not responsible for customer modification of tools for applications on which MYTORQ was not consulted.
4. Repairs should be made only by authorized, trained personnel. Consult your nearest MYTORQ authorized service center.
5. It is the responsibility of the employer to place the information in this manual into the hands of the operator.

**DO NOT ATTEMPT TO REPAIR THIS
ELECTRIC SCREWDRIVER**

CAUTION

**SAVE THESE INSTRUCTIONS
DO NOT DESTROY**


**Our company reserves the right to modify
the product without prior notice.**

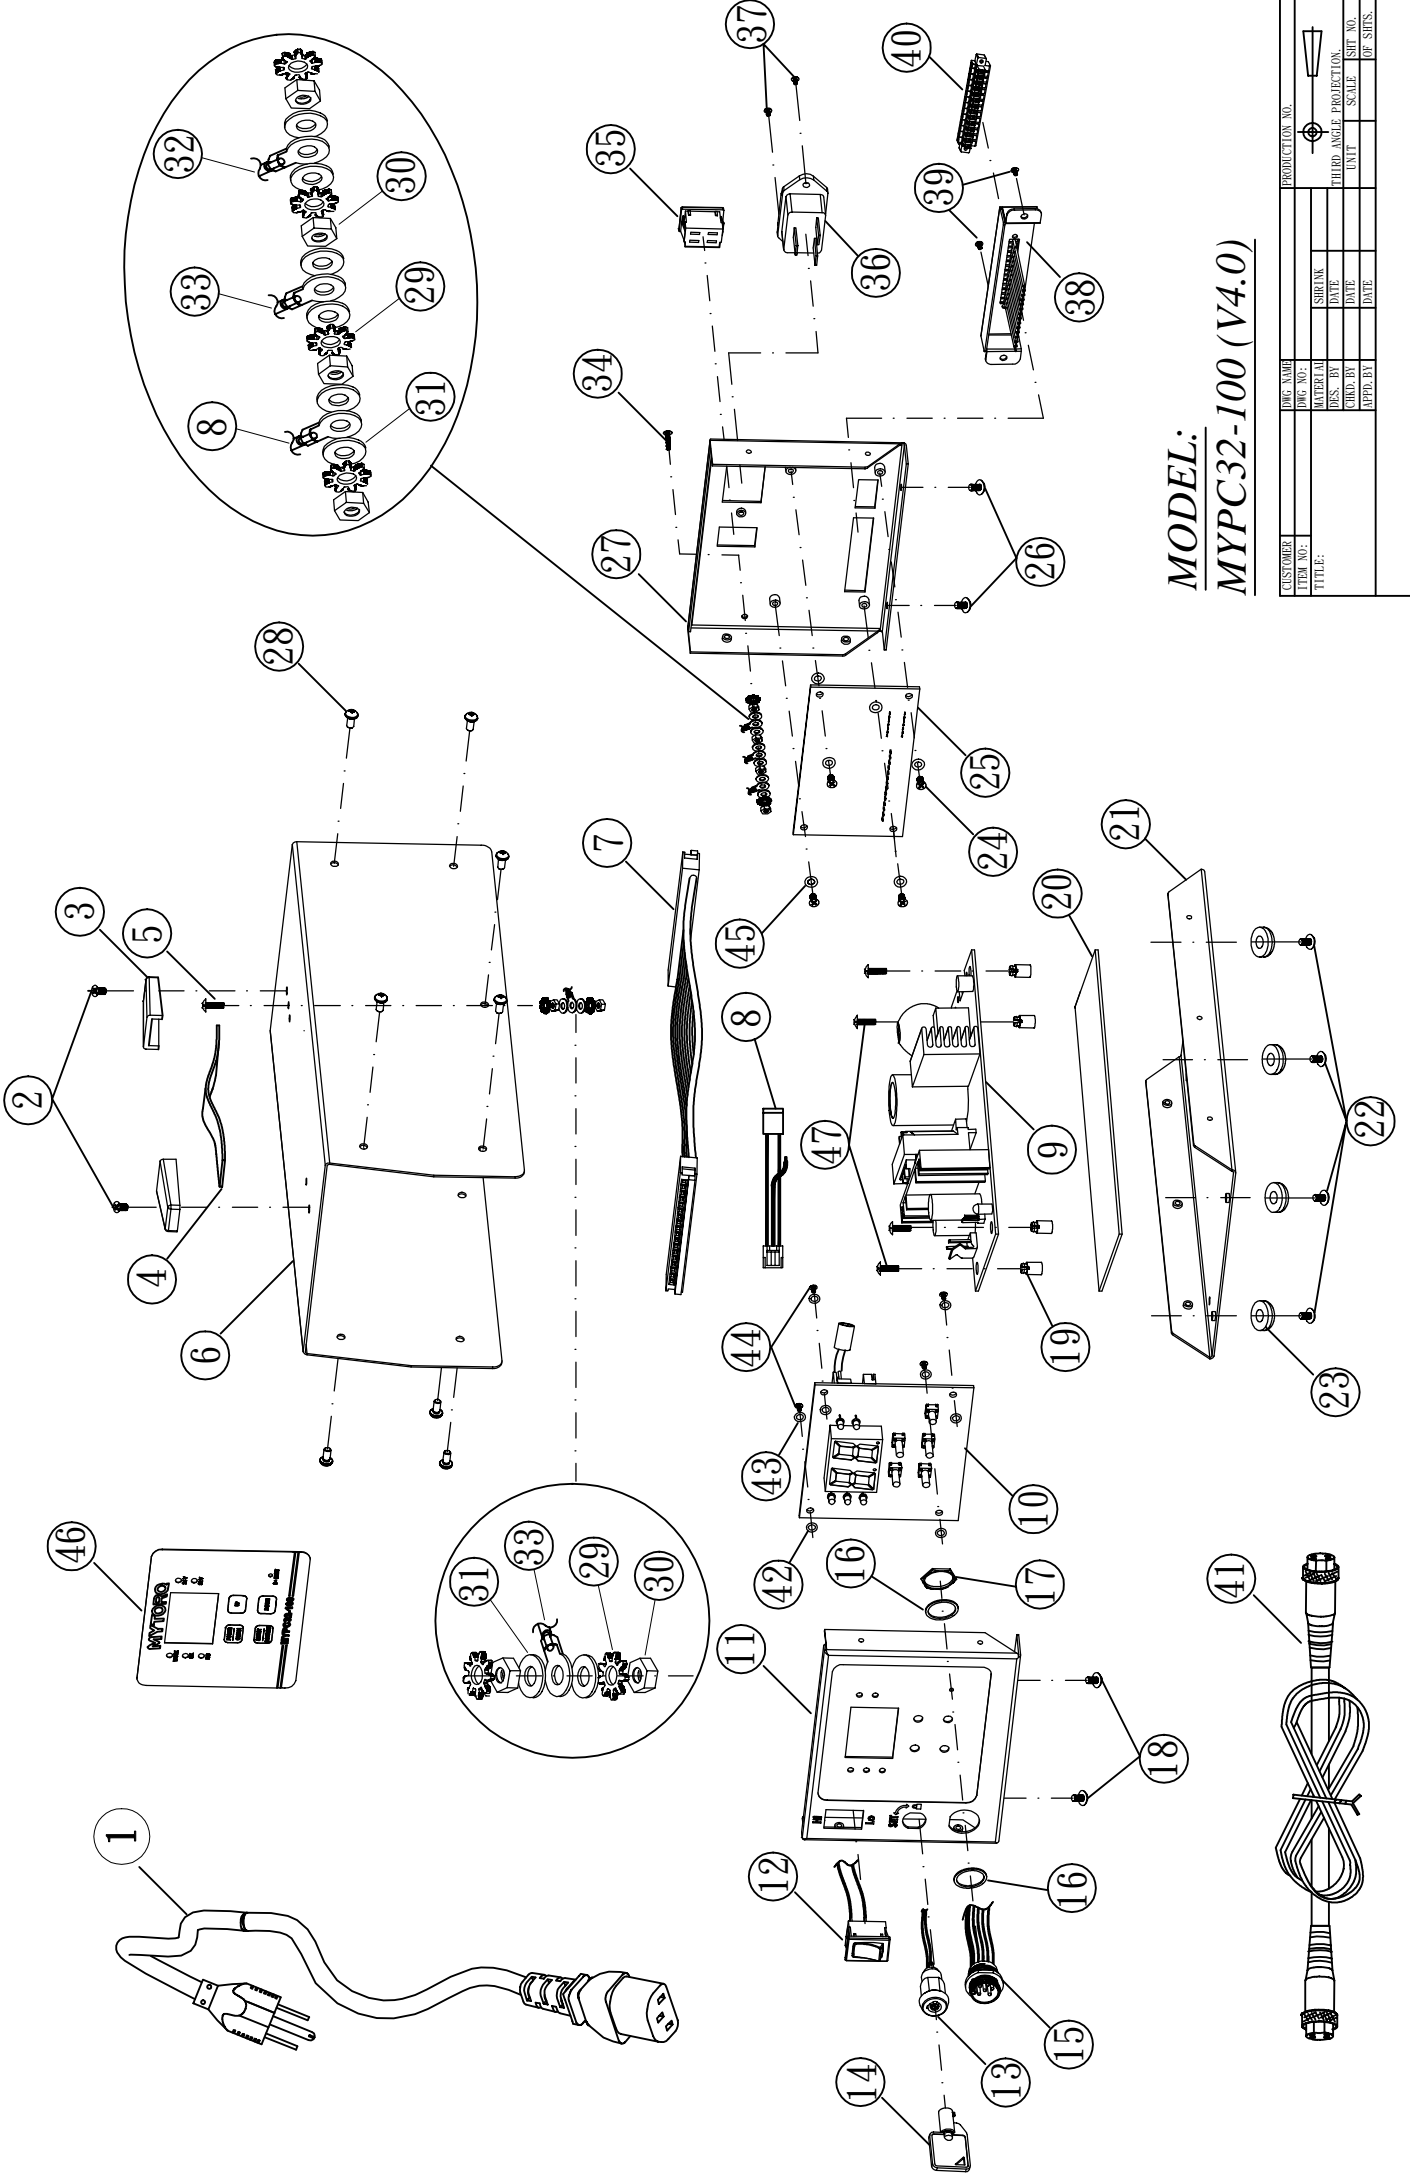

MODEL:
MYPC32-100 (V4.0)

CUSTOMER:	DWG. NAME:	PRODUCTION NO.:	
ITEM NO.:	DWG. NO.:	THIRD ANGLE PROJECTION:	
TITLE:	MATERIAL:	UNIT:	
	DES. BY:	SCALE:	
	CHK. BY:	SHEET NO.:	
	APP. BY:	DATE:	
		DATE:	
		DATE:	
		DATE:	
		DATE:	


NO	PARTS NO	PARTS NAME-E	PARTS NAME-C	Qty	NO	PARTS NO	PARTS NAME-E	PARTS NAME-C	Qty
1	AA50002	America Plug	美插電源線	1	23	CH20110	Rubber Shim	腳墊	4
	AA50002-1	Australia Plug	澳插電源線	1	24	CH20505-6	SCREW 3*5	螺絲 3*5	4
	AA50002-2	Europe Plug	歐插電源線	1	25	EG50110-1	Output PCB	輸出機板成品	1
	AA50002-3	British Plug	英插電源線	1	26	CH20504	SCREW 3*5	螺絲 3*5	2
	AA50002-6	India Plug	印插電源線	1	27	P11039-2	Housing-backside	外殼後蓋	1
2	CH20506	Screw 4*12	螺絲 4*12	2	28	CH20504	SCREW 3*5	螺絲 3*5	10
3	W50102	Handle Loop Root	皮帶固定座	2	29	CH20302	WASHER	外齒型滑司M4	6
4	P11005	Handle	外殼皮帶	1	30	CH20401	BOLT M4	螺帽 M4	6
5	CH20155	SCREW 4*12 NI	螺絲 4*12 NI	1	31	CH20301	WASHER	華司 M4	8
6	P11039	Housing-Upside	外殼上蓋	1	32	CH50696	GROUNDING MEANS	接地線 220mm	1
7	E31715	36Pin Plug	36P排插頭	1	33	CH50695	GROUNDING MEANS	接地線 180mm	1
8	E31718-21	CONNECT	3P排插	1	34	CH20501	SCREW 4*25	螺絲 M4*25	1
9	EG50101-33A	Power PCB	電源機板成品	1	35	P11401-19	Powe Switch	電源開關	1
10	EG50111-5	hypothesis PCB	計數機板成品	1	36	E31702	AC Inlet	電源插座	1
11	P11038-1	Housing-Front Side	外殼前蓋	1	37	CH20505	SCREW 3*8	螺絲 3*8	2
12	P11402-11	Hi / Lo Switch ASS'Y	Hi / Lo 開關半成品	1	38	C50227A	TERMINAL COVER	轉接蓋半成品	1
13	P11404-2	Key Switch ASS'Y	鑰匙開關半成品	1	39	CH20504	SCREW 3*5	螺絲 3*5	2
14	P11404-1	Key	鑰匙	1	40	E31701-25	Female	母座	1
15	PZ50165-9	Connector ASS'Y 6Pin	6芯插座半成品	1	41	AA50001-139N	CORD ASSEMBLY 3M	電源線 3M	1
16	X10067	WASHER	墊片	2	42	P11020-3	INSULATING WASHER	絕緣墊片	4
17	X10068	BOLT	六角螺帽	1	43	X10032-4	Washer	馬達墊片 (鉬尼龍)	4
18	CH20504	SCREW 3*5	螺絲 3*5	2	44	CH20505-6	Screw 3*5	螺絲 3*5	4
19	W50115	Spacer Support	間隔柱	4	45	X10032-4	Washer	馬達墊片 (鉬尼龍)	8
20	W50103-1	INSULATING WASHER	絕緣墊片	1	46	YTM0172-1	Sticker-Model	面板貼紙	1
21	P11039-3	Housing-Underside	外殼下蓋	1	47	CH20517	SCREW M3*15 NI	螺絲 M3*15 NI	4
22	CH20504-0	Screw 3*5	螺絲 3*5	4					

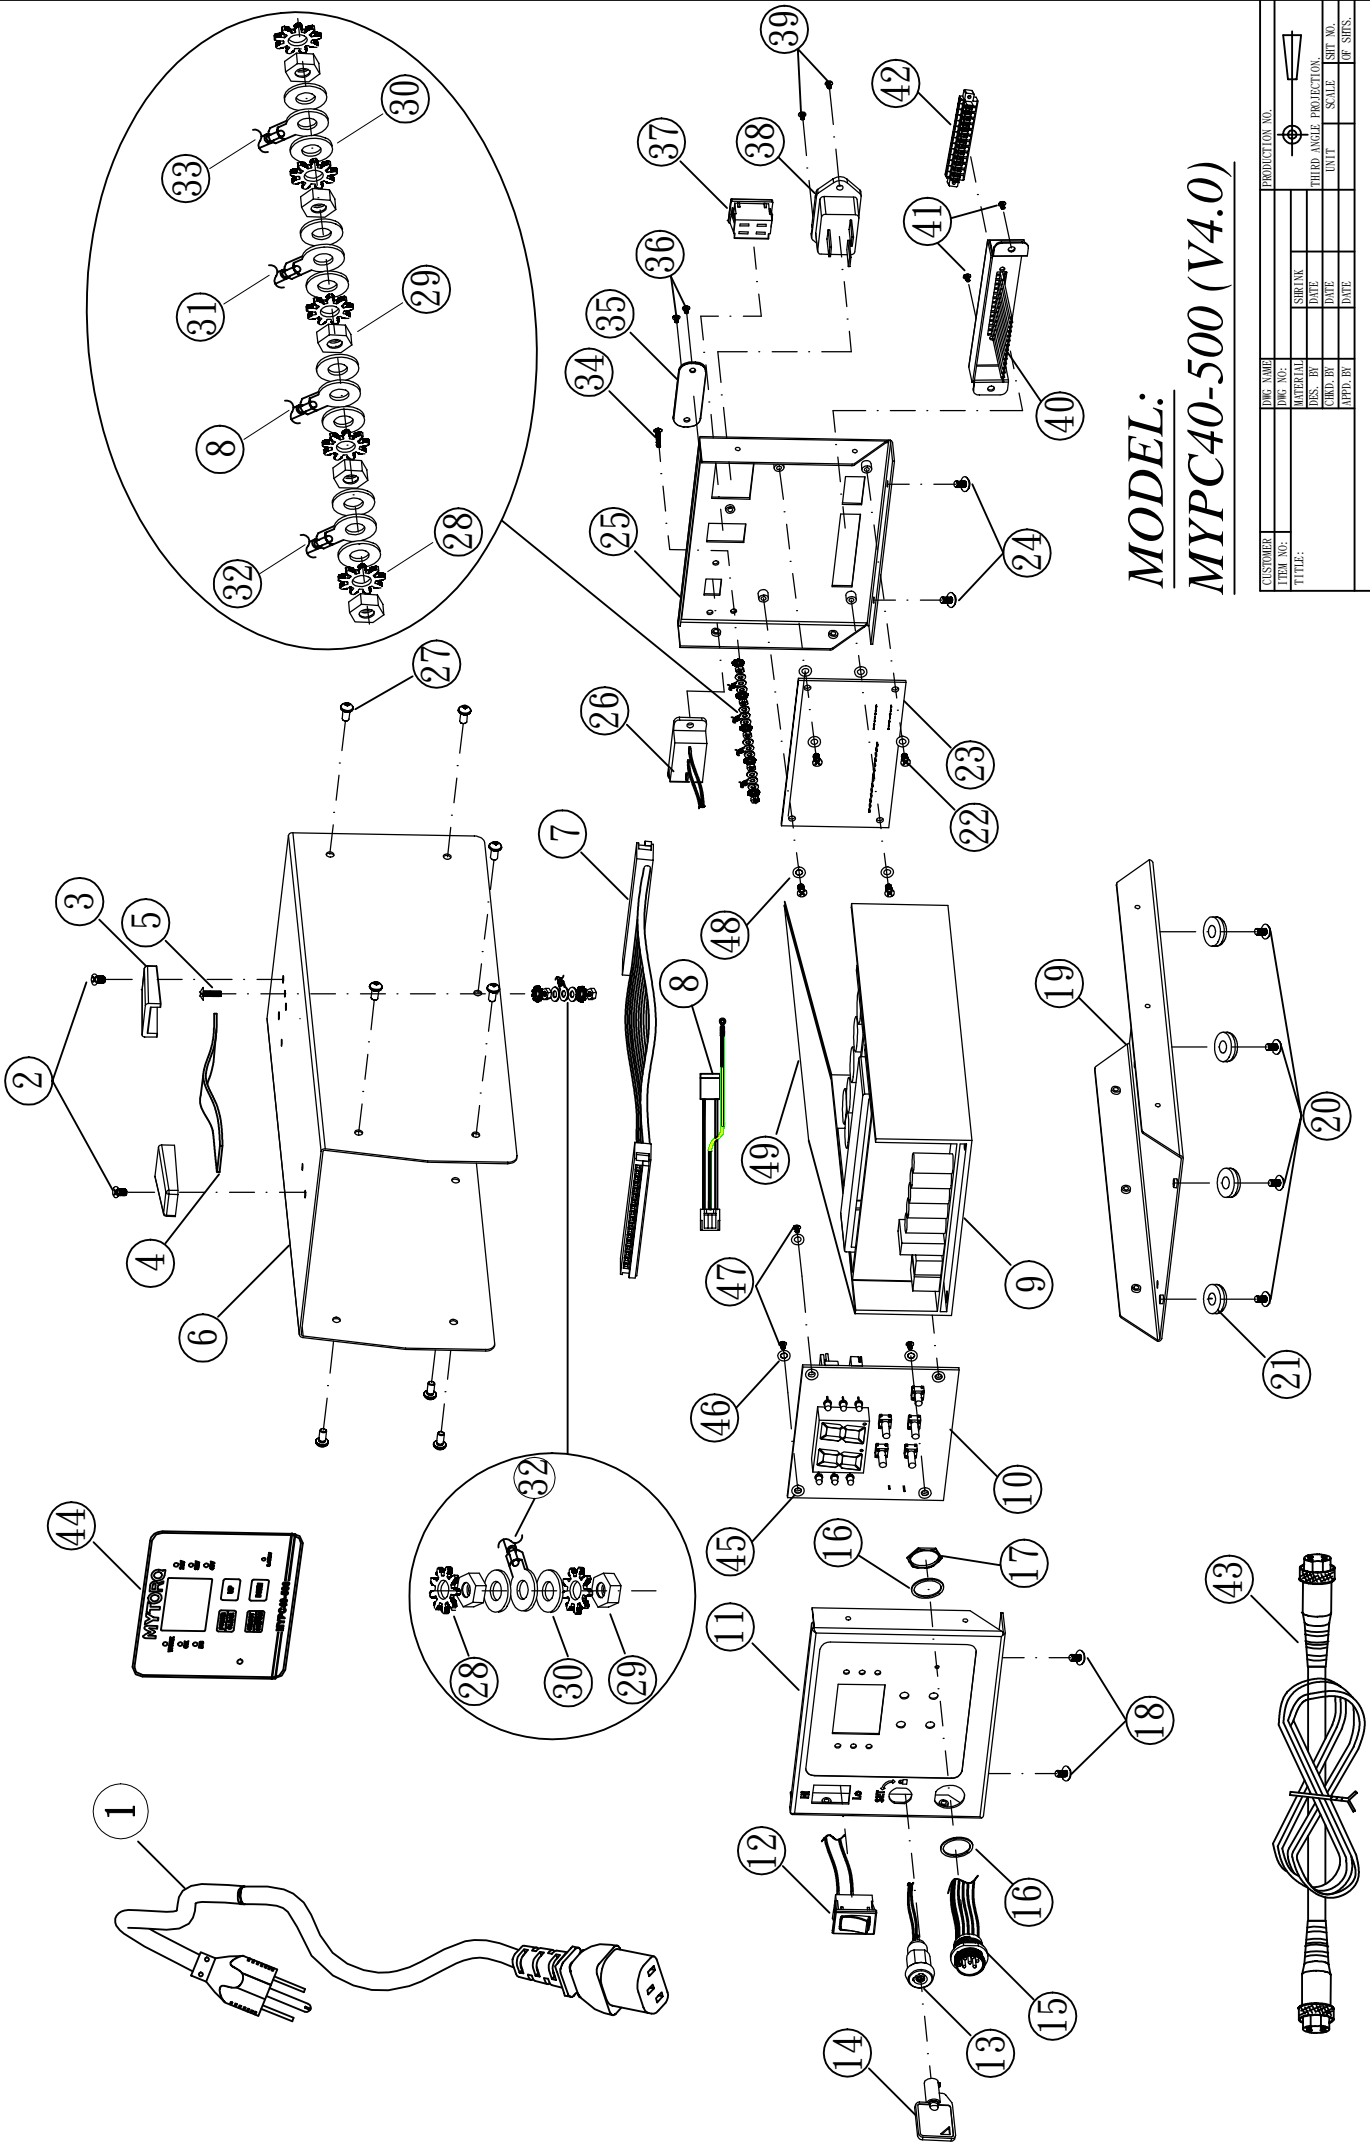

MODEL:
MYPC40-500 (V4.0)

CUSTOMER:	DWG. NAME:	PRODUCTION NO.:
ITEM NO.:	DWG. NO.:	
TITLE:	MATERIAL:	SHRINK:
	DWG. BY:	THIRD ANGLE PROJECTION:
	CHECK BY:	DATE:
	APPR. BY:	UNIT:
		SCALE:
		SHT. NO.:
		OF SHTS.

NO	PARTS NO	PARTS NAME-E	PARTS NAME-C	Qty	NO	PARTS NO	PARTS NAME-E	PARTS NAME-C	Qty
1	AA50002	America Plug	美插電源線	1	24	CH20504	Screw 3*5	螺絲 3*5	2
	AA50002-1	Australia Plug	澳插電源線	1	25	PI1038-2	Housing-backside	外殼後蓋	1
	AA50002-2	Europe Plug	歐插電源線	1	26	PI1403-1	Voltage Choice Switch ASSY	電壓選擇開關半成品	1
	AA50002-3	British Plug	英插電源線	1	27	CH20504	Screw 3*5	螺絲 3*5	10
	AA50002-6	India Plug	印插電源線	1	28	CH20302	Washer	外齒型滑司 M4	7
2	CH20506	Screw 4*12	螺絲 4*12	2	29	CH20301	Washer	華司 M4	10
3	W50102	Handle Loop Root	皮帶固定座	2	30	CH20401	Bolt M4	螺帽 M4	7
4	PI1005	Handle	外殼皮帶	1	31	CH50696-5	Grounding Means	接地線 150mm	1
5	CH20155	Screw 4*12	螺絲 4*12	1	32	CH50695	Grounding Means	接地線 180mm	1
6	PI1038	Housing-Upside	外殼上蓋	1	33	CH50696-2	Grounding Means	接地線 100mm	1
7	E31715	36Pin Plug	36P排插頭	1	34	CH20515	Screw 4*30	螺絲 M4*30	1
8	E31718-3	CONNECT	3P排插	1	35	C50216	Fixture	保護蓋	1
9	EG50101-42	Power PCB	電源機板成品	1	36	CH20513	Screw 3*12	螺絲 3*12	2
10	EG50111-5	hypothesis PCB	計數機板成品	1	37	PI1401-19	Powe Switch	電源開關	1
11	PI1038-1	Housing-Front Side	外殼前蓋	1	38	E31702	AC Inlet	電源插座	1
12	PI1402-11	Hi / Lo Switch ASSY	Hi / Lo 開關半成品	1	39	CH20505	Screw 3*8	螺絲 3*8	2
13	PI1404-2	Key Switch ASSY	鑰匙開關半成品	1	40	C50227A	Terminal Cover	轉接蓋半成品	1
14	PI1404-1	Key	鑰匙	1	41	CH20504	Screw 3*5	螺絲 3*5	2
15	PZ50165-9	Connector ASSY 6Pin	6芯插座半成品	1	42	E31701-25	Female	母座	1
16	X10067	Washer	墊片	2	43	AA50001-139N	Cord Assembly 3M	電源線 3M	1
17	X10068	BOLT	六角螺帽	1	44	YTM0171-1	Sticker-Model	面板貼紙	1
18	CH20504	Screw 3*5	螺絲 3*5	2	45	PI1020-3	Insulating Washer	絕緣墊片 3.1*8*1	4
19	PI1038-3	Housing-Underside	外殼下蓋	1	46	X10032-4	Washer	馬達墊片(鉅尼龍)	4
20	CH20504-0	Screw 3*5	螺絲 3*5	4	47	CH20505-6	Screw 3*5	螺絲 3*5	4
21	CH20110	Rubber Shim	腳墊	4	48	X10032-4	Washer	馬達墊片(鉅尼龍)	8
22	CH20505-6	Screw 3*5	螺絲 3*5	4	49	W10200-4	Mvlar Film	PC絕緣墊片	1
23	EG50110-1	Output PCB	輸出機板成品	1					

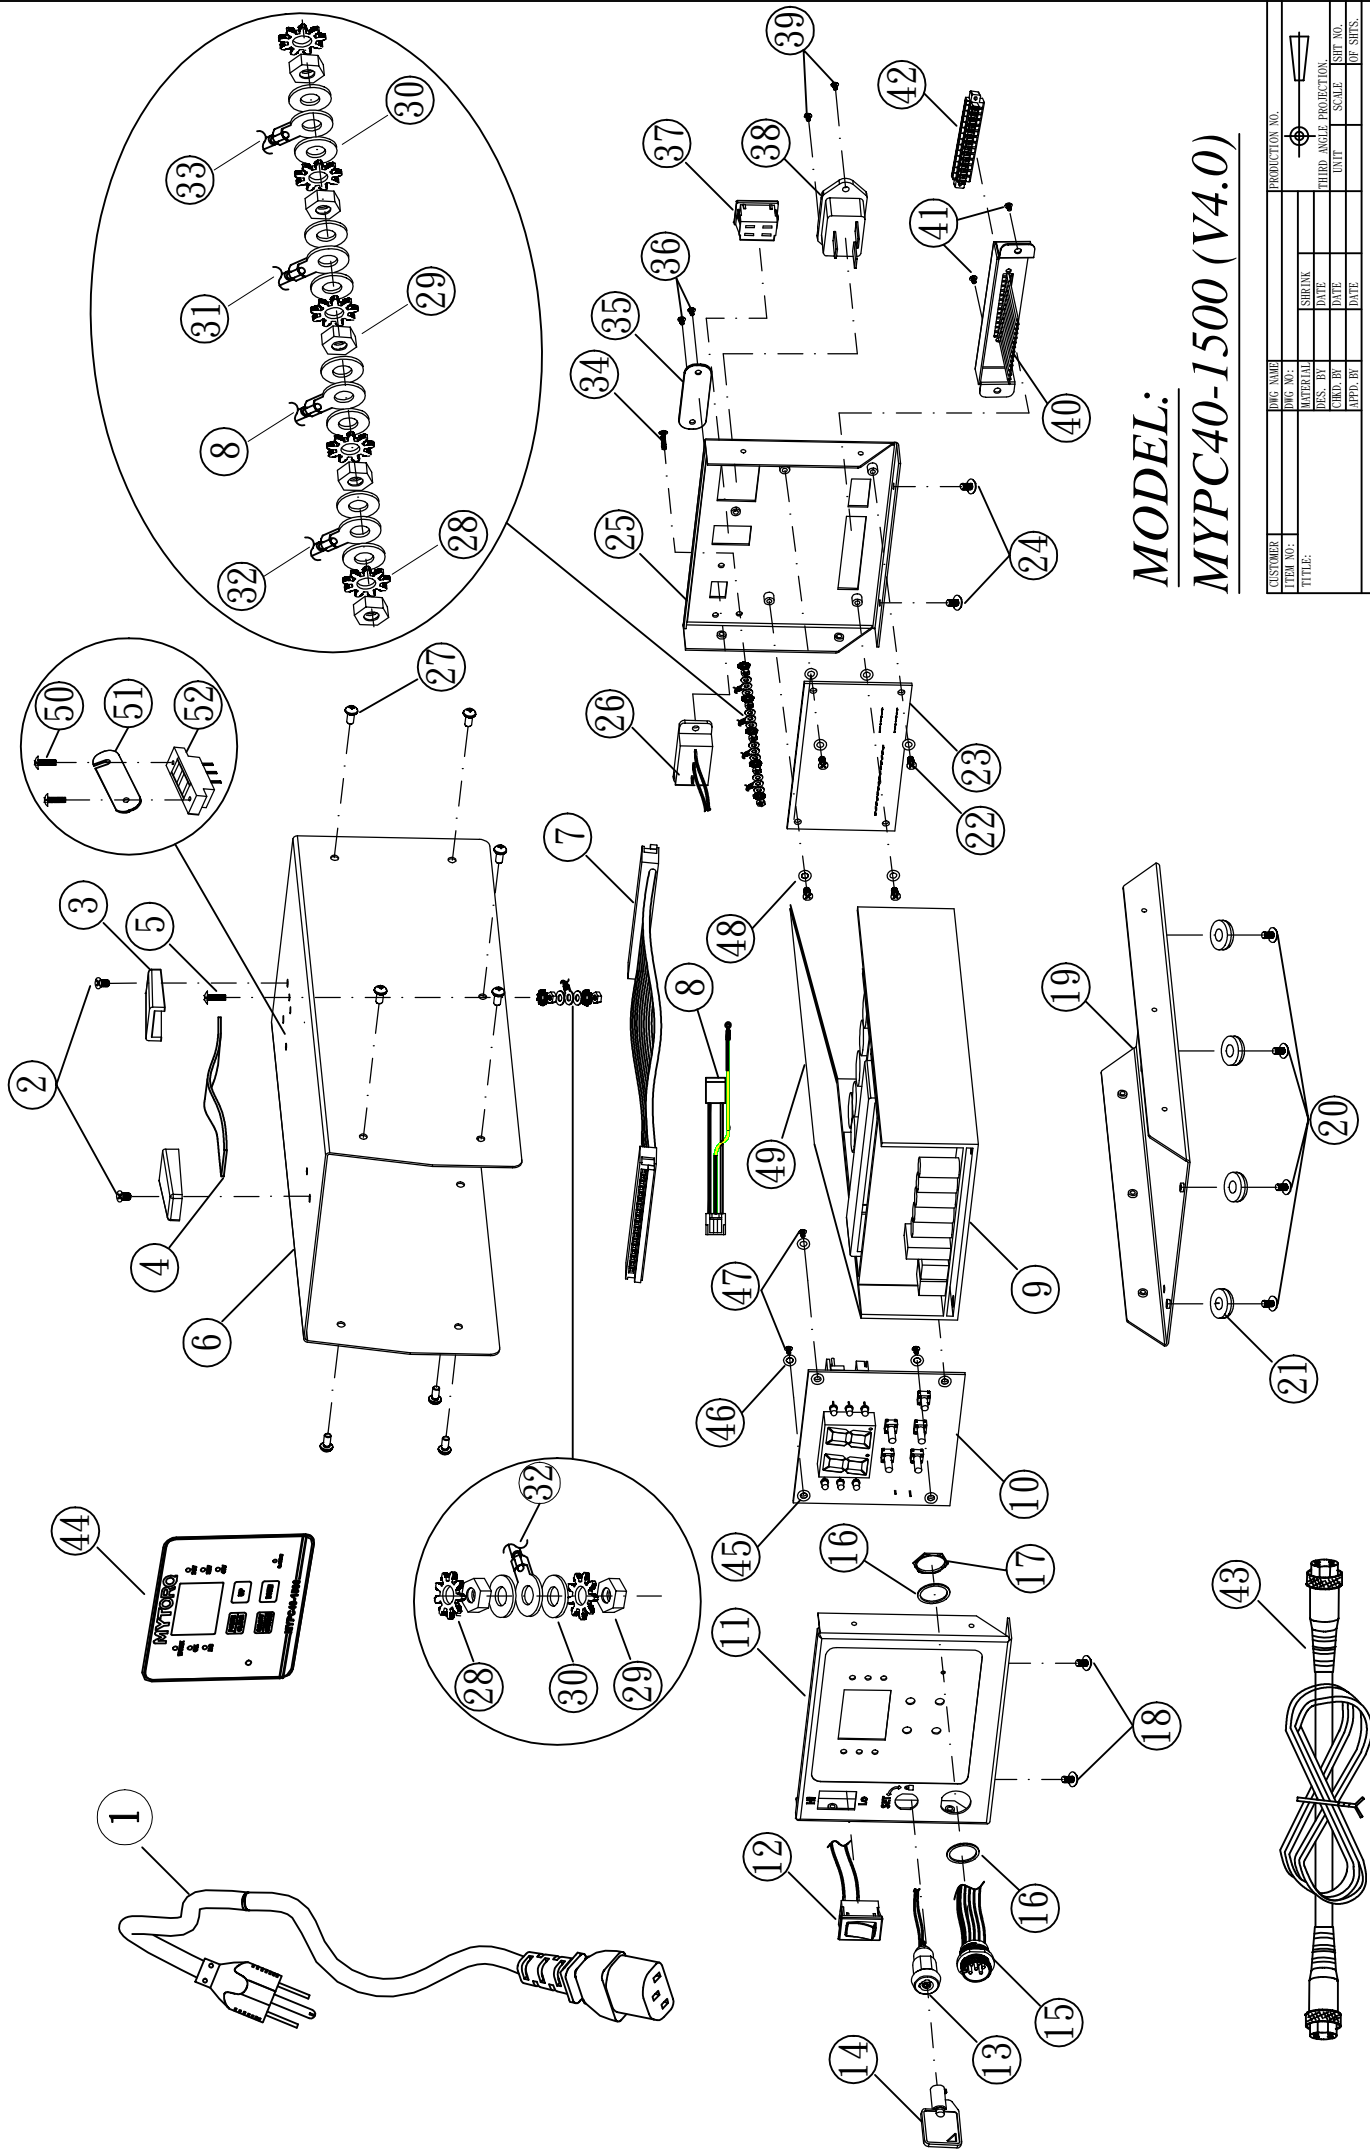

MODEL:
MYPC40-1500 (V4.0)

CUSTOMER	DATE	PRODUCTION NO.	DATE	DATE	DATE	DATE	DATE
ITEM NO.	REV. NO.	MATERIAL	SHIPMENT	THIRD ANGLE PROJECTION	UNIT	SCALE	STF NO.
TITLE:							OF SHEETS

NO	PARTS NO	PARTS NAME-E	PARTS NAME-C	Q'ty	NO	PARTS NO	PARTS NAME-E	PARTS NAME-C	Q'ty
1	AA50002	America Plug	美插電源線	1	25	P11038-2	Housing-backside	外殼後蓋	1
	AA50002-1	Australia Plug	澳插電源線	1	26	P11403-1	Voltage Choice Switch ASSY	電壓選擇開關半成品	1
	AA50002-2	Europe Plug	歐插電源線	1	27	CH20504	Screw 3*5	螺絲 3*5	10
	AA50002-3	British Plug	英插電源線	1	28	CH20302	Washer	外齒型滑司 M4	7
	AA50002-6	India Plug	印插電源線	1	29	CH20301	Washer	華司 M4	10
2	CH20506	Screw 4*12	螺絲 4*12	2	30	CH20401	Bolt M4	螺帽 M4	7
3	W50102	Handle Loop Root	皮帶固定座	2	31	CH50696-5	Grounding Means	接地線 150mm	1
4	P11005	Handle	外殼皮帶	1	32	CH50695	Grounding Means	接地線 180mm	1
5	CH20155	Screw 4*12	螺絲 4*12	1	33	CH50696-2	Grounding Means	接地線 100mm	1
6	P11038	Housing-Upside	外殼上蓋	1	34	CH20515	Screw 4*30	螺絲 M4*30	1
7	E31715	36Pin Plug	36P排插頭	1	35	C50216	Fixture	保護蓋	1
8	E31718-3	CONNECT	3P排插	1	36	CH20513	Screw 3*12	螺絲 3*12	2
9	EG50101-36	Power PCB	電源機板成品	1	37	P11401-19	Powe Switch	電源開關	1
10	EG50111-5	hypothesis PCB	計數機板成品	1	38	E31702	AC Inlet	電源插座	1
11	P11038-1	Housing-Front Side	外殼前蓋	1	39	CH20505	Screw 3*8	螺絲 3*8	2
12	P11402-11	Hi / Lo Switch ASSY	Hi / Lo 開關半成品	1	40	C50227A	Terminal Cover	轉接蓋半成品	1
13	P11404-2	Key Switch ASSY	鑰匙開關半成品	1	41	CH20504	Screw 3*5	螺絲 3*5	2
14	P11404-1	Key	鑰匙	1	42	E31701-25	Female	母座	1
15	PZ50165-9	Connector ASSY 6Pin	6芯插座半成品	1	43	AA50001-139N	Cord Assembly 3M	電源線 3M	1
16	X10067	Washer	墊片	2	44	YTM0171-1	Sticker-Model	面板貼紙	1
17	X10068	BOLT	六角螺帽	1	45	P11020-3	Insulating Washer	絕緣墊片 3.1*8*1	4
18	CH20504	Screw 3*5	螺絲 3*5	2	46	X10032-4	Washer	馬達墊片(鉅尼龍)	4
19	P11038-3	Housing-Underside	外殼下蓋	1	47	CH20505-6	Screw 3*5	螺絲 3*5	4
20	CH20504-0	Screw 3*5	螺絲 3*5	4	48	X10032-4	Washer	馬達墊片(鉅尼龍)	8
21	CH20110	Rubber Shim	腳墊	4	49	W10200-4	Mvlar Film	PC絕緣墊片	1
22	CH20505-6	Screw 3*5	螺絲 3*5	4	50	CH20513	Screw 3*12	螺絲 3*12	2
23	EG50110-1	Output PCB	輸出機板成品	1	51	C50216	Fixture	保護蓋	1
24	CH20504	Screw 3*5	螺絲 3*5	2	52	P11403-3	Voltage Choice Switch ASSY	電壓選擇開關半成品	1

